

## **XTR-III USER GUIDE**

The XTR-III is a hand held tag transponder, for AEI and RCL tags. It contains an onboard GPS module that will log the location, time, date and tag ID internally. It will also display the ID tag for user verification, and also the RSSI values for the RCL pucks. The XTR-III also has an auto-off function, the unit will power off with-in 15 seconds of in-active usage to help maximize battery life.

## To use the XTR-III:

- 1. Press and hold the button for about 5 seconds until the display powers on.
- 2. To sync the GPS, just press and hold the button until GPS link has been established. A blinking Cirlce or Dot (o) will show up, to the left of the Power percentage.
- 3. Place the antenna squarely over the tag, length wise, about 2"- 4" away from its surface
- 4. Press the button again, slowly sweeping the antenna over the tag until the ID appears.
  \*\*Note: you may need to readjust the position of the antenna if the ID does not appear\*\*
- 5. When finished, the XTR-III will power off automatically.
- 6. Charge the XTR-III with the provided wall charger, when needed.
- 7. The XTR-III may be adjusted for user comfort be either the compression grip nut at the top of the unit, or the wing nut at the base of the rod.



## To store the XTR-III:

- 1. Loosen the wing nut at the base of the rod until the ball mount can move freely.
- 2. Loosen compression grip nut at the base of the grip, so grip and move freely.
- 3. Place each component in its designated slot in case.
- 4. Close case, and store for later usage.