

JEM Radio II Quick Start Guide

1. TX/RX Channel Selection:
Press **CHAN**. Enter **3 digit TX** channel, **3 digit RX** channel.
2. Enter Custom RAN:
Press **RAN**. Enter **2 digit TX RAN**, **2 digit RX RAN**.
Alternatively: Press **RAN**. Enter **2 digit TX RAN**. Then press **RAN** again or let it time out to use RX value for TX.
NOTE: **RAN** codes cannot be entered on Home Channels.
3. Set PLL Tones when on analog channel:
Press **RAN**. Enter **2 digit TX PLL**, **2 digit RX PLL**.
Alternatively: Press **RAN**. Enter **2 digit TX PLL**. Then press **RAN** again or let it time out to use RX value for TX.
4. Change to Home Channel:
Press **HOME** enter **home channel number** then press **HOME** again if less than 3 digits or let it time out.
5. PTT: Press and hold **PTT** (Push-To-Talk) button to activate microphone and begin transmission. Let go to end transmission.
6. View Previous Text Message:
Press **MENU > 1 GENERAL > 3 SCROLL TEXT > MENU**.
7. View All Text Messages (up to 10):
Press **MENU > 1 GENERAL > 3 SCROLL TEXT > Volume Up/Down to change message number to 0 > MENU**. All messages will scroll across display in chronological order, starting with newest.
8. Quickly Switch Back to Previous Channel/RAN/PLL:
Press **HOME** followed by the **#** key.
9. Adjust Squelch
Press **MENU > 1 GENERAL > 1 SQUELCH > Volume Up/Down**. (Squelch cannot be adjusted on digital channels)
10. Adjust Display Brightness:
Press **MENU > 5 Display > 1 Brightness > Volume Up/Down**.
11. Adjust Volume:
Press the **up arrow** on **VOL** button to increase volume. Press the **down arrow** on **VOL** button to decrease volume.
12. Send DTMF tones:
Press number buttons **0 through 9** to transmit DTFM tones.
13. Adjust relative volume of a non-amplified conductor panel if equipped.
Press **MENU > 1 GENERAL > 2 VOL OFFSET**
A value less than 0 makes it quieter relative to the main front panel speaker volume
A value greater than 0 makes it louder relative to the main front panel speaker volume